

## 103815 TRANSMISSION, 4 SPEED [FUNK]

NO	PART NUMBER	DESCRIPTION
1	95356	GEAR, COUNTERSHAFT DRIVE
2	95357	BEARING, SLEEVE
3	95358	COLLAR, SHIFTING
4	95359	HUB, SHIFTING COLLAR
5	95360	COUNTERSHAFT
6	95361	GEAR, 2nd COUNTERSHAFT
7	95362	GEAR, 3RD COUNTERSHAFT
8	95363	BEARING, 2nd/3rd GEAR COUNTERSHAFT
9	95364	BEARING, COUNTERSHAFT FRONT
10	95365	BEARING, COUNTERSHAFT REAR
11	95366	GEAR, LOW MAIN SHIFT
12	95367	ROLLER, LOOSE
13		
14	95369	GEAR, MAIN SHIFT [2nd]
15	95370	GEAR, MAIN SHIFT [3rd]
16	95371	SHAFT, MAIN
17	95372	BEARING, BALL MAIN SHAFT REAR
18		
19	3540641	PLUG, MAGNETIC
20	3540642	COVER, SIDE
21	95377	GASKET, SIDE & COVER
22	44512	C/SCR, HH 3/8-16UNC x 1 LG
23	95398	WASHER, SEALING
24	95378	O-RING, SEAL
26	95385	WASHER, STAR
27	95386	C/SCR
28	3540643	PLUG, PIPE
29	95402	CAP, SIDE SHIFT
30	95403	FORK, 2nd & 3rd SHIFTER
31		
32	95405	SECTOR, SHIFTER
33	95406	BLOCK, INHIBITOR
34	95407	BALL
35	95408	SPRING, DETENT SELECTOR
36	95409	C/SCR, DRILLED HEAD
37	95392	WIRE, SAFETY
38	95410	PIN, ROLL
39	95411	SHAFT, SHIFT SELECTOR
40		
41	95413	PIN, ROLL
42	95414	SEAL, RING



## 103815 TRANSMISSION, 4 SPEED [FUNK]

NO	PART NUMBER	DESCRIPTION
60	3540646	SEAL, RING
61	95416	C/SCR
62	95417	NUT
63	79792	BEARING, TRANSMISSION PILOT
64	3540645	GEAR, INPUT SHAFT
65	95418	BEARING, BALL
66	95419	SPACER, BEARING
67	95420	BEARING
68	95421	RING, SNAP
69	95422	C/SCR
70	95423	LOCKWASHER
71	103281	SHIM, CPN FLG