

3760 0031 97 Transmission		
No.	Part number	Description
1	3760 0070 92	Case, transmission
2	3760 0070 93	Adapter sae "c"
3	3760 0070 94	Cap
4	3760 0070 95	Fork assy
5	3760 0070 96	Lever, shaft trans assy
6	3760 0070 97	Rail, shift
7	3760 0070 98	Pin, inhibiter
8	3760 0070 99	Pin, lever
9	3760 0071 00	Lever, inside
10	3760 0071 01	Gear, main shaft lo
11	3760 0071 02	Gear, main shaft 2nd
12	3760 0071 03	Gear, counter lo
13	3760 0071 04	Gear, counter 2nd
14	3760 0071 05	Gear, counter 3rd
15	3760 0071 06	Gear, counter driven
16	3760 0071 07	Washer, lower gear #2
17	3760 0071 08	Gasket, cap
18	3760 0071 09	Gear, main shaft 3rd
19	3760 0071 10	Gear, shaft input
20		Loctite Superflex
21	3760 0071 12	Kit, needle roller brg - 39 pcs
22	3760 0071 13	Main shaft, spld w/ funk trans
23	3760 0071 14	Spring, detent
24	3760 0071 15	Needle bearing
25	3760 0071 16	Modified trans. Shaft
26	3760 0071 17	Seal, oil
27	3760 0071 18	Plug, freeze
28	3760 0071 19	Knob, lever
29	3760 0071 20	Breather
30	3760 0053 06	Modified shift lever
31	3760 0071 21	Coupling tran/mtr/cs1000
32	3760 0071 22	Loctite
33	3760 0094 84	Bearing
34	3760 0094 86	Bearing
35	3760 0094 87	Bearing
36	3760 0094 88	Bearing
37	5530 7750 00	Roll pin
38	0108 1103 01	Roll pin
39	5530 8326 00	Roll pin
40	0335 1104 25	Retaining ring
41	0335 1104 26	Retaining ring
42	0335 1104 27	Retaining ring
43	0517 1116 00	Ball
44	0144 3287 03	Bolt
45	0144 3404 03	Hex
46	5530 6040 00	Bolt

3760 0031 97 Transmission

No .	Part number	Description
47	5530 7029 00	Lockwasher
48	5530 7049 00	Lockwasher
49	0686 3115 02	Plug
50	0686 3115 06	Plug
51	0916 3573 12	Screw
52	0113 4615 19	Pin, yoke
53	3760 0075 09	Plug, magnetic pipe
54	0292 1338 09	Locknut
55	3760 0072 90	Snap ring